



Menu Screens

The pictures for the menu screens can be changed with this utility.

1. Click **Go to > Utilities/Password Entry > Menu Screens**. See Figure 1.

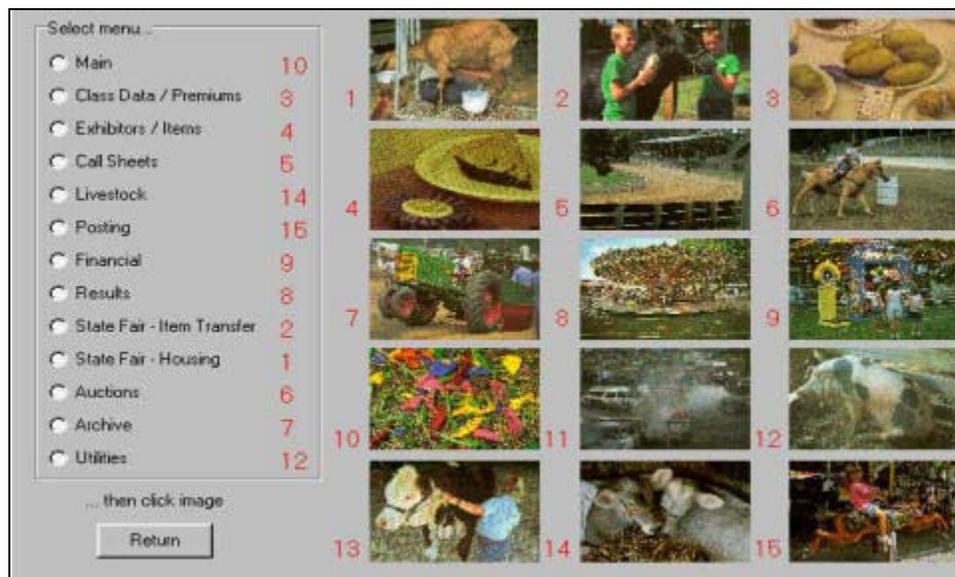


Figure 1. Menu Screens

2. Click the radio button for the screen being changed.
3. Select an image from the list.