



Apollo Quick Start Guide




Please refer to "**General Guidelines for Road Tube Installation**" and the "**Apollo GPS Guide**" for further setup information.

Step #1:




You will see this screen when you first turn on your Apollo counter. Simply use the **<Alt>** and letter keys to type in a name for your site. Press **<Enter>** to continue. ↓

Step #2:

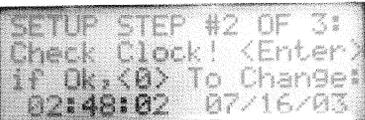

Press **<Enter>** at this screen if the clock is correct, if it is not correct, press **<0>** and insert the correct time. Press **<Enter>** when you are finished. ↓

Step #3:

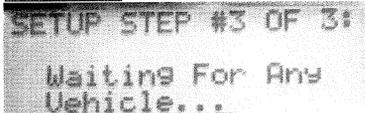


At this screen you can wait for a vehicle to go by to see if your setup is working properly. If it is, press **<Enter>**, if it is not, check the setup and verify that the tubes are connected properly. If you want to change the tube configuration for the counter, you can press **<Clear>** and proceed to Step #3b. If the lane configuration is already set correctly, you can press **<Enter>** and leave the counter to collect data. ↓

Step #3b:




If you press **<Clear>** in the "Waiting For Any Vehicle" (Step 3) you can then press the arrow keys (**←→**) on this screen to select your tube configuration. Press **<Enter>** when you find the layout you need. ↓

Step #4:

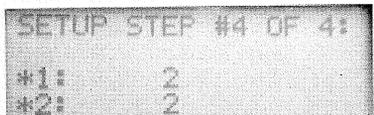


If you are in count mode the screen will appear as shown left. Check to make sure the unit is collecting data correctly, then press **<Enter>** to start collecting data.

Monitoring Collection:

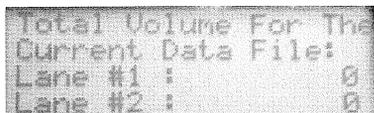

To monitor data collection press **<Enter>** when the counter is collecting data (display will normally be blank). Display will turn on to this screen where you can monitor your lane volume as traffic passes to make sure the unit is operating correctly. If you press **<Enter>** again you will see the system status screen. ↓

Viewing System Status:

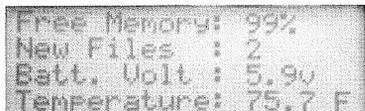

This screen displays the system status to see the information about the counter. When you are done press **<Enter>**

NOTE: If the battery voltage is 6.0 or less, the unit needs to be charged.

Diamond Traffic Products
support@diamondtraffic.com
 ph. 541.782.3903
 fax. 541.782.2053